

# Beam\_control

The T9 beam line is controlled from the EBCR barrack.

## Magnet settings

2 sets of table are provided in the EBCR barrack - none of them is optimized for our setup, so ONLY USE this table for **NEGATIVE** and this table for **POSITIVE** polarity.

## Slits settings

the slits are controlled with the vertical and horizontal control; to get a FWHM of  $x$  mm you must input a value of  $50+x/2$ ; for example, to get an aperture of  $\pm 5$ mm you should input a value of 52.5. The following values should be used:

## MNP17 settings

use the control display in the EBCR and load the MNP17 settings (ZT9\_SPECTRO controls). Use the following table to control magnetic field. Special values are identified with a \*.