How-to Download PLC Ladder Logic

How-to Download PLC Ladder Logic with RSLogix500

Contents:

- How-to Download PLC Ladder Logic with RSLogix500
 - PART I: Setup Communications with RSLINX
 - PART II: Download the Ladder Logic to your PLC
 PART III: Download the Ladder Logic to Nervelatile Memory
 - PART III: Load Ladder Logic to Nonvolatile Memory

References

- How-to Configure PLC Ethernet Communications
- LCLS How-to Release Software
- LCLS How-to Recover Software from CVS
- PLC Users at SLAC

PART I: Setup Communications with RSLINX

STEP 1 - Connect the hardware

The type cable you use to connect your PC and PLC depends upon the PLC hardware installed. If you have have a serial connection on your PLC controller module you will use an RS-232 cable. However, some PLC installations at SLAC also have an ethernet module (eg ENET), in which case an Ethernet connection can be setup. Follow the directions below that apply to your installation.

RS-232 connection

Connect a null-modem 9-pin cable from your PC to the serial port on the PLC. This is the most common way to program a PLC in the field. The Allen-Bradley part no. for this cable is 1756-CP3/A.

Ethernet connection

If using Ethernet, you can connect a crossover cable from your PC to the Ethernet Module. To do this, your PC and PLC must be on the same subnet. If the PLC is on an accessible network, you can connect your PC to that network.

STEP 2 - Open RSLinx and bring up the list of communication drivers Open RSLINX.

If you have already setup a communications driver before, skip to **STEP 5**. Click on Communications and Configure Driver.



Click on the drop-down menu and select RS-232 DF1 devices.

Click on Add New.

A window will pop up. Just click OK.

For an Ethernet connection, click on Ethernet/IP Driver.

This will browse the local subnet or remote subnet for PLC devices.

Available Driver Types:		Claus
RS-232 DF1 devices	Add New	LIUSE
RS-232 DF1 devices		Help
Ethernet devices		< Summinum
Ethernet/IP Driver		1
1784-KTC(X) for ControlNet devices	Status	
DF1 Polling Master Driver	Running	Configure
1784-PCC for ControlNet devices	Running	
1784-FUIU(S) for Controlinet devices		Startup
DF1 Slave Driver		
S-S SD/SD2 for DH+ devices		Start
Virtual Backplane (SoftLogix58xx) DeviceNet Drivers (1794,PCD /PCIDS 1770,KED SDNPT drivers)		
PLC-5 (DH+) Emulator driver		Stop
SLC 500 (DH485) Emulator driver		
SoftLogix5 driver		Delete
Remote Devices via Linx Gateway		

STEP 4 - Configure the communications driver A window will come up to configure the communication. Just click on Auto-Configure. For an Ethernet connection, choose whether you want to browse a local or remote subnet. A local subnet will be used for most cases.

RS-232 DF1 de Configured Noivers Name and Des AB_DF1-1 DF1 AB_DF1-1 DF1 Comm Port: COM1 AB_ETHIP-1 A Baud Rate: 19200 Parity: None Error Checking: CRC Stop Bits: 1 Protocot: Full Duplex et	ure
Name and Des Comm Port: COM1 Device: Logix 5550 / CompactLogix Ju AB_ETHIP-1 A Baud Rate: 19200 Station Number: 02 Baud Rate: 19200 Station Number: 02 article Parity: None Error Checking: CRC or Stop Bits: 1 Protocol: Full Duplex et	ure
Baud Rate: 19200 Station Number: 02 (Decimal) Parity: None Firror Checking: CRC Stop Bits: 1 Protocol: Full Duplex	up
Parity: None Error Checking: CRC pg Stop Bits: 1 Protocol: Full Duplex et	
Stop Bits: 1 Protocol: Full Duplex	2
	ete
Auto-Configure Auto Configuration Successful!	
Image: Sep press F1 Image: Sep press	01:39 PM

STEP 5 - Display the communication drivers Click on Communications and RSWho. This shows the communication drivers you have setup.

🍓 RSLinx Classic	for RSView - [F	RSWho - 1]		*********	
😽 File Edit View	Communications	Station DDE/OPC	Security Window He	elp	_ @ ×
* 2 0	RSWho				
 ✓ Autobrowse ● 器 Workstation, F ● 器 Linx Gater ● 器 AB_DF1-1 ● 器 AB_ETHIP 	Configure Driv Configure Shor Configure Clier Configure CIP Driver Diagnos	ers rtcuts ht Applications Options tics	DF1-1 DF1 AB_ETHIP Ethernel	-1	
	CIP Diagnostic: Gateway Diagr	s nostics			
Display station browser				Bill IM	10/05/07 01-46 DM

STEP 6 - Reconfigure a communications driver This step is for users who have setup communications before and need to make a change. You can right click on the communications driver and click Configure Driver. This brings up the window from **STEP 5**, where you can change the configuration.

🌯 RSLinx Classic fo	or RSView - [RSWh	o - 1]						×
💑 File Edit View C	Communications Static	on DDE/(DPC Security V	Vindow Help			- 6	×
* \$ @								
Autobrowse	lefresh	Not	Browsing					
E 🗐 Workstation, PCI 표 윪 Linx Gatewa	D-BRI ays, Ethernet	몲	器	器				
한 쁆 AB_DF1-1, 한 쁆 AB_ETHIP	Remove Properties Driver Diagnostics	Linx tew	AB_DF1-1 DF1	AB_ETHIP-1 Ethernet				
	Configure Driver	1						
	Create Shortcut							
-	Security							
/ For Help, press F1	1				NUM	10/05/07	01:49 PM	//

STEP 7 - Display attached devices

If you expand the icons by clicking on the + symbol, you should see your device. If using Ethernet, you will see all PLC devices in your subnet.



PART II: Download the Ladder Logic to your PLC

STEP 8 - Open RSLogix5000

Open RSLogix5000 and the applicable file to download. Click Communications and Who Active.



STEP 9 - Download program

"Warning: This step will take your PLC out of Run mode." Ensure that the PLC keyswitch in the REM or PROG position. Click on the + next to your communications driver until you find your PLC. Click Download and Download again on the new pop up window. You also have the option to Go Online in this window.

Who Active		<u>QQ</u>
Autobrowse Refresh		<u>玉</u> 器
금 📕 Workstation, PCD-BRI 한 器 Linx Gateways, Ethernet 금 器 AB_DF1-1, DF1	Go Online (L)- Upload	but 🔏 Compare
 1, 1756-L61 LOGIX5561, LCLS_PLC_LI24_MG01 E Backplane, 1756-A7/A 	Download	
00, 1756-L61 LOGIX5561	Update Firmware	
02, 1756-IB16I/A, 1756-IB16I/A DCIN ISOL 03, 1756-OF6VI/A, 1756-OF6VI/A XXXXXX 04, 1756-IF6I/A, 1756-IF6I/A AAAAAA 05, 1756-IF6I/A, 1756-IF6I/A AAAAAA ⊕ 06, 1756-ENBT/A, 1756-ENBT/A ⊕ 🚼 AB_ETHIP-1, Ethernet	Close Help	
'ath: AB_DF1-1 'ath in Project: <none></none>	Set Project Path	
PS_RAMPING_STAT PS_RAMPING_STAT Motion Groups Trends		

STEP 10 - Place PLC in Run mode

Note - Most PLCs are equipped with nonvolatile memory. Proceed to **STEP 11** to load the program into nonvolatile memory. Otherwise, proceed with the next steps to place the PLC in Run mode.

There are two methods of placing the PLC in Run mode; Run and Remote Run. Each has its advantages and disadvantages.

RUN: This is done by simply placing the keyswitch in the RUN position. In this mode, the PLC cannot be programmed remotely. This will prevent someone from "accidentally" taking the PLC out of Run mode or modifying the Ladder Logic. In this mode, the PLC will NOT load the Ladder Logic stored in nonvolatile memory during power up.

REMOTE RUN: This is done by placing the keyswitch in the REM position and going online to tell the PLC to go into Run mode. In this mode, the PLC can be programmed remotely, whether intentional or unintentional. It is only in this mode that the PLC is able to load the Ladder Logic in nonvolatile memory during power up.

To place the PLC in REMOTE RUN: Place the PLC keyswitch in the REM position. Go online with the PLC. Refer to the previous step if you need help. Click on the small PLC icon and again on Run Mode.

💕 RSLogix 5000 - L	CLS_PLC_LI24_MG01	in LCLS_PLC_S24_VERS_1.ACD [1756-L61]	
File Edit View Searc	ch Logic Communications	Tools Window Help	
		9101.2 - & & & 	
Rem Prog 🚺	Program Mode	Reti AB_DF1-1* 🗹 뷺	
No Forces	<u>G</u> o Offline		
No Edits	Upload		
Redundancy	Download	Favorites (Bit (Timer/Counter (Input/Output (Compare	6
Controller L	Program Mode		
	<u>R</u> un Mode		
E Power-L	<u>T</u> est Mode		
🖻 😁 Tasks	Clear Baults		
🖃 🤁 Main Tas	Go To Faults		
	Controller Properties		
	JLT RESET		
- 🗎 GRO	OUND_FAULTS		
	PUT VOLTAGE MONITOR		
B out	TPUTS_TO_MEM		
PS1	DAMDING STAT		
	d Programs		
🗄 🕀 🧰 Motion Groups			
Trends			
Land Hara Tonac			
Change controller mode to	o Remote Run		

PART III: Load Ladder Logic to Nonvolatile Memory

STEP 11 - Open Controller Properties window

When power is down for extended periods of time and the battery dies, the ladder logic loaded in the PLC disappears. Loading an image to nonvolatile memory ensures that the PLC loads the ladder logic from memory during power up.

Start by going online with the PLC and place it in PROG mode. Refer to **STEP 9** to see a screen shot of the window with the Go Online option. Click on the Edit menu and again on Controller Properties



STEP 12 - Display the Nonvolatile Memory properties

A window will pop up displaying the controller properties.

Click on the Nonvolatile Memory tab.

Here you will see the image currently stored in nonvolatile memory. Click on the Load/Store button.

🛱 RSLogix 5000 - LCLS_PLC_L124_MG01 in LCLS_PL	.C_S24_VERS_1.ACD [1756-L61]
File Edit View Search Logic Communications Tools Win	dow Help
Bem Prog	▼ & & & E I I C C C
No Forces Controller OK No Edits A Forces No Edits A Forces No Edits A Forces No Edits A Force No Edits A Fo	Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State Image: International State
Controller LCLS_PLC_LI24_MG01 Controller Tags Controller Fault Handler Controller Fault Handle	Controller Properties - LCLS_PLC_L124_MG01 General Serial Port System Protocol User Protocol Major Faults Minor Faults Date/Time Advanced SFC Execution File Redundancy Nonvolatile Memory Memory Image in Nonvolatile Memory Name: LCLS_PLC_L124_MG01 Type: 1756-L61 ControlLogix5561 Controller Revision: 15.3 Load Image: On Power Up Load Mode: Run (Remote Only) Image Note: Stored: 8/17/2007 9:58:12 AM
	UK Lancei Apply Help
Ready	

STEP 13 - Store program in nonvolatile memory A window will pop up with information on the image in memory and options to Load or Store an image. Select options: Load Image: On Power Up and Load Mode: Run (Remote Only). Click on <-- Store. Two windows will pop up. Click on Yes and OK.

BRSLogix 50	000 - LCLS_PLC_L124_MG01 in LCLS_PLC_S24_VERS_1.ACD [1756-L61]	
Rem Prog No Forces No Edits Redundancy	Image: Sector of the sector	Imput/Output
Contro Co Co Co Co Co Co Co Co Co Co Co Co Co	Image in Nonvolatile Memory Controller Name: LCLS_PLC_Ll24_MG01 Type: 1756-L61 ControlLogix5561 Controller Revision: 15.3 Load Image: On Power Up Load Mode: Run (Remote Only) Image Note: Image Note: Stored: 8/17/2007 8/17/2007	CLS_PLC_LI24_MG01 '56-L61/B Controller In Power Up tun (Remote Only) Close Help
Type 1 Description Slot 0 Major Fault Minor Fault C	[2] 1756-IB161 [3] 1756-DE6VLANALOG OLITOLIT [756-L61 ControlLogix5561 Controller	OK Cancel Apply Help

You should have now successfully downloaded the program into the PLC and stored it in nonvolatile memory. The final step is to go back online with the PLC and place it in RUN mode. Refer to **STEP 9** and **STEP 10** for instructions.