

Disabling and enabling the SSR

The following commands allow the disabling or enabling of the SSR using the LICOS Python shell interface:

To disable:

```
>>> v = DBN[ '_vsc' ]  
>>> v.ssr(0)
```

To enable:

```
>>> v = DBN[ '_vsc' ]  
>>> v.ssr(1)
```