

RTM Installation

An RTM is inserted and removed in the [same manner as a COB](#).

Please refer to page 22 of the following workshop presentation:

[RPT_Workshop_Shelf Installation_Networking_and_Administration.pptx](#)