

# Retrieving RCE IP Addresses

The RCE IP address is assigned dynamically by a DHCP server.

The RCE IP address cannot be set statically.

Using the SDK:

execute [atca\\_dump](#)

execute [dsl\\_identify](#)