

RCE Bootloader Countdown

To disable the U-Boot countdown:

[Log into the RCE](#)

Execute:

```
>>fw_setenv bootdelay 0
```

[Reboot the RCE](#)

To enable U-Boot countdown:

[Log into the RCE](#)

Execute:

```
>>fw_setenv bootdelay 3
```

[Reboot the RCE](#)