

RCE Bootloader Shell

To enter the RCE bootloader shell:

[Connect to the RCE serial console](#)

[Reboot the RCE](#)

At U-Boot countdown, press any key.