

DTM Fulcrum Switch Manager

For DTMs not installed in a COB, the switch manager software must be disabled.

To disable the Fulcrum switch manager

[Log into the DTM](#)

Execute `fw_setenv nocm 1`

Execute `systemctl disable fmd`

[Reboot DTM](#)

To reenable the Fulcrum switch manager

[Log into the DTM](#)

Execute `fw_setenv nocm`

Execute `systemctl enable fmd`

[Reboot DTM](#)