

# RTM Installation

An RTM is inserted and removed in the [same manner as a COB](#).

Please refer to page 22 of the following workshop presentation:

[RPT\\_Workshop\\_Shelf Installation\\_Networking\\_and\\_Administration.pptx](#)