

U-Boot Environment File

fw_printenv/fw_setenv, a command line interface to U-Boot environment

```
usage: fw_printenv [-a key] [-n] [variable name]
fw_setenv [-a key] [variable name] [variable value]
fw_setenv -s [ file ]
fw_setenv -s - < [ file ]
```

The file passed as argument contains only pairs name / value

Example:

Any line starting with # is treated as comment

```
netdev eth0
kernel_addr 400000
var1
var2 The quick brown fox jumps over the lazy dog
```

A variable without value will be dropped. It is possible to put any number of spaces between the fields, but any space inside the value is treated as part of the value itself.