

Software FAQ

[What is the RCE SDK?](#)

[How do I download and install the RCE SDK?](#)

[What platforms can I install the RCE SDK on?](#)

[How do I use the RCE SDK?](#)

[How do I find the RCE name/ID?](#)

[How do I log into an RCE?](#)

[How do I reboot an RCE?](#)

[How do I connect to an RCE serial console?](#)

[How do I connect to the DTM serial console?](#)

[How do I compile software for the RCE?](#)

[How do I copy files to an RCE?](#)

[How do I troubleshoot RCE booting?](#)

[What are the RCE boot codes?](#)

[How do I disable the bootloader countdown?](#)

[How do I enable the bootloader countdown?](#)

[How do I get the bootloader shell?](#)

[How do I restore a file using the linux rescue disk?](#)

[How do I restore a file using the bootloader?](#)

[How do I disable the DTM switch manager?](#)

[What is RCE core software?](#)

[How do I upgrade the RCE core software?](#)

[How do I upgrade Arch Linux?](#)

[How do I develop software for Arch Linux?](#)

[How do I upgrade the Linux kernel?](#)

[How do I upgrade the bootloader?](#)

[How do I create a new RCE SD card?](#)

[How do I stop the Linux journal from writing to the SD card?](#)