

# Run camViewer

The shell is case sensitive and there is a difference between camViewer and camviewer. The former is what you want.

## Step-by-step guide

1. Use Bash
2. Make sure that you are running camViewer, not camviewer



## Related articles

- [Remote access session on NoMachine or FastX \(and add aliases to your .bashrc file\)](#)
- [Fully power down the SPL](#)
- [Cold start the SPL](#)
- [How to make a new recipe for the LPL](#)
- [New big compressor alignment procedure](#)