

Start/Restart AMI

- > `startami` in a terminal to start or restart the AMI client
 - Use the `Load` button to load saved configuration of the AMI plots
- > `startami -c cxi_0.cnf` to open an AMI client from a non-daq computer