


How to initialize and home XPS motors

Typically needed to recover after power loss

Step-by-step guide

1. Access the web interface, e.g. Laser IN10 Infrastructure MOC-LR10-LS05 Web interface

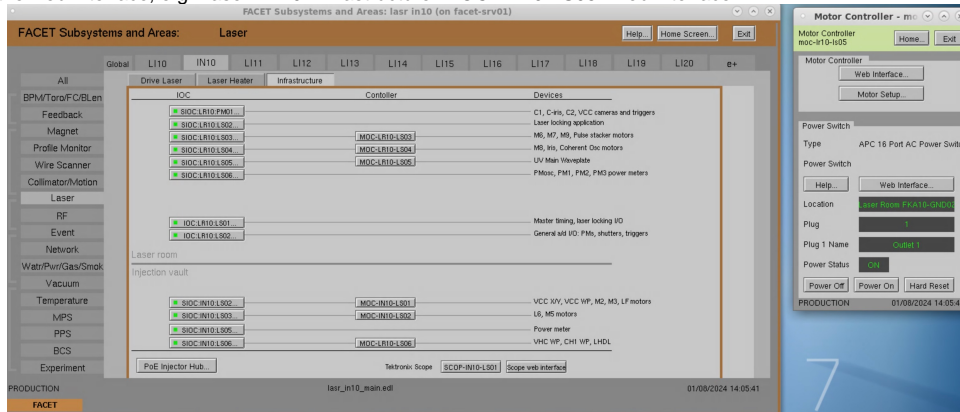

- a.
2. Login with username and password: Administrator / facetfacet
 3. For each motor
 - a. Click Initialize
 - b. Click Home
 - c. Watch the motor position update to some value X
 - d. It will then go from X to zero
 - e. Set the motor to -X to get back to the previous position